



9600 Baud

RS232 Link

From Geiger Counter

Counts input

Connect optocoupler to J2 to receive counts

The Picaxe Program:

```

Setfreq m8
Start:
Count 3,2000,w0
Sertxd (b0,b1)
Goto start
End

```

Botsmaker		
Counts to Serial Adaptor		
W. D. Sherman	Rev 1.0	
	3/18/2011	