

USB Flash Drive Boot Reference List

Manufacturer	Type	Models	Boot Menu	Boot Once	BIOS/UEFI Key	Change Priority
Acer			Esc, F12, F9		Del, F2	
Acer	netbook	Aspire One zg5, zg8	F12		F2	
Acer	netbook	Aspire Timeline	F12		F2	
Acer	netbook	Aspire v3, v5, v7	F12	The "F12 Boot Menu" must be enabled in BIOS. It is disabled by default.	F2	
Apple		After 2006	Option			
Asus	desktop		F8		F9	
Asus	laptop	VivoBook f200ca, f202e, q200e, s200e, s400ca, s500ca, u38n, v500ca, v550ca, v551, x200ca, x202e, x550ca, z202e	Esc		Delete	
Asus	laptop	N550JV, N750JV, N550LF, Rog g750jh, Rog g750jw, Rog g750jx	Esc	Disable "Fast Boot" and "Secure Boot Control" in order to boot from MBR formatted media.	F2	
Asus	laptop	Zenbook Infinity ux301, Infinity ux301la, Prime ux31a, Prime ux32vd, R509C, Taichi 21, Touch u500vz, Transformer Book TX300	Esc	Disable "Fast Boot" and "Secure Boot Control" in order to boot from MBR formatted media.	F2	
Asus	notebook	k25f, k35e, k34u, k35u, k43u, k46cb, k52f, k53e, k55a, k60ij, k70ab, k72f, k73e, k73s, k84l, k93sm, k93sv, k95vb, k501, k601, R503C, x32a, x35u, x54c, x61g, x64c, x64v, x75a, x83v, x83vb, x90, x93sv, x95gl, x101ch, x102ba, x200ca, x202e, x301a, x401a, x401u, x501a, x502c, x750ja	F8		DEL	
Asus	netbook	Eee PC 1015, 1025c	Esc		F2	Boot Tab, Boot Device Priority, 1st Boot Device, Removable Device, F10
Compaq		Presario	Esc, F9		F10	BIOS "Advanced Tab", Boot Order
Dell	desktop	Dimension, Inspiron, Latitude, Optiplex	F12	Select "USB Flash Drive".	F2	
Dell	desktop	Alienware Aurora, Inspiron One 20, Inspiron 23 Touch, Inspiron 620, 630, 650, 660s, Inspiron 3000, X51, XPS 8300, XPS 8500, XPS 8700, XPS 18 Touch, XPS 27 Touch	F12	Select "USB Flash Drive".	F2	
Dell	desktop	Inspiron One 2020, 2305, 2320, 2330 All-In-One	F12	Select "USB Flash Drive".	F2	
Dell	laptop	Inspiron 11 3000 series touch, 14z Ultrabook, 14 7000 series touch, 15z Ultrabook touch, 15 7000 series touch, 17 7000 series touch	F12	Select "USB Storage Device"	F2	Settings->General->Boot Sequence->"USB Storage Device", then up arrow, [Apply]--[Exit]

USB Flash Drive Boot Reference List

Manufacturer	Type	Models	Boot Menu	Boot Once	BIOS/UEFI Key	Change Priority
Dell	laptop	Inspiron 14R non-touch, 15 non-touch, 15R non-touch, 17 non-touch, 17R non-touch	F12	Select "USB Storage Device"	F2	Settings->General->Boot Sequence->"USB Storage Device", then up arrow, [Apply]--[Exit]
Dell	laptop	Latitude c400, c600, c640, d610, d620, d630, d830, e5520, e6320, e6400, e6410, e6420, e6430, e6500, e6520, 6430u Ultrabook, x300	F12	Select "USB Storage Device" from boot menu.	F2	
Dell	laptop	Precision m3800, m4400, m4700, m4800, m6500, m6600, m6700, m6800	F12	Select "USB Storage Device" from boot menu.	F2	
Dell	laptop	Alienware 14, Alienware 17, Alienware 18, XPS 11 2-in-1, XPS 12 2-in-1, XPS 13, XPS 14 Ultrabook, XPS 15 Touch,	F12	Select "USB Storage Device" from boot menu.	F2	
eMachines			F12		Tab, Del	
Fujitsu			F12		F2	
HP	generic		Esc, F9		Esc, F10, F1	
HP	desktop	Pavilion Media Center a1477c	Esc		F10	BIOS "Advanced" tab, Boot Order, Move "USB Device" before "Hard Drive"
HP	desktop	Pavilion 23 All In One	Esc	Select boot media from the menu.	F10	UEFI/BIOS "Advanced" tab, Boot Order, Move "USB Device" before "Hard Drive". For non-UEFI media, disable secure boot and enable legacy support.
HP	desktop	Pavilion Elite e9000, e9120y, e9150t, e9220y, e9280t	Esc, F9		F10	
HP	desktop	Pavilion g6 and g7	Esc		F10	UEFI/BIOS "Advanced" tab, Boot Order, Move "USB Device" before "Hard Drive"
HP	desktop	Pavilion HPE PC, h8-1287c	Esc	Then F9 for "Boot Menu"	Esc	F10, Storage tab, Boot Order, Legacy Boot Sources
HP	desktop	Pavilion PC, p6 2317c	Esc	Then F9 for "Boot Menu"	Esc	F10, Storage tab, Boot Order, Legacy Boot Sources
HP	desktop	Pavilion PC, p7 1297cb	Esc	Then F9 for "Boot Menu"	Esc	F10, Storage tab, Boot Order, Legacy Boot Sources
HP	desktop	TouchSmart 520 PC	Esc	Then F9 for "Boot Menu"	Esc	F10, Storage tab, Boot Order, Legacy Boot Sources
HP	laptop	2000	Esc	Then F9 for "Boot Menu". Select "Patriot Memory" on the Boot Option Menu.	Esc	Then F10, Storage tab, Boot Order, Legacy Boot Sources

USB Flash Drive Boot Reference List

Manufacturer	Type	Models	Boot Menu	Boot Once	BIOS/UEFI Key	Change Priority
HP	notebook	Pavilion g4	Esc		F10	BIOS "Advanced" tab, Boot Order, Move "USB Device" before "Hard Drive"
HP	notebook	ENVY x2, m4, m4-1015dx, m4-1115dx, sleekbook m6, m6-1105dx, m6-1205dx, m6-k015dx, m6-k025dx, touchsmart m7	Esc	Then F9 for "Boot Menu"	Esc	Then F10, Storage tab, Boot Order, Legacy Boot Sources
HP	notebook	Envy, dv6 and dv7 PC, dv9700, Spectre 14, Spectre 13	Esc	Then F9 for "Boot Menu"	Esc	Then F10, Storage tab, Boot Order, Legacy Boot Sources
HP	notebook	2000 - 2a20nr, 2a53ca, 2b16nr, 2b89wm, 2c29wm, 2d29wm	Esc	Then F9 for "Boot Menu"	Esc	Then F10, Storage tab, Boot Order, Legacy Boot Sources
HP	notebook	Probook 4520s, 4525s, 4540s, 4545s, 5220m, 5310m, 5330m, 5660b, 5670b	Esc		F10	BIOS "Advanced" tab, Boot Order, Move "USB Device" before "Hard Drive"
HP	tower	Pavilion a410n	Esc		F1	BIOS "Boot" tab, Boot Device Priority, Hard Drive Boot Priority, Move "USB-HDD0" up to #1 position.
Intel			F10			
Lenovo	desktop		F12, F8, F10		F1, F2	
Lenovo	laptop		F12		F1, F2	
Lenovo	laptop	ThinkPad edge, e431, e531, e545, helix, l440, l540, s431, t440s, t540p, twist, w510, w520, w530, w540, x140, x220, x230, x240, X1 carbon	F12		F1	
Lenovo	laptop	IdeaPad s300, u110, u310 Touch, u410, u510, y500, y510, yoga 11, yoga 13, z500	Novo button	Small button on the side next to the power button.	Novo button	Small button on the side next to the power button.
Lenovo	laptop	IdeaPad P500	F12 or Fn + F11		F2	
Lenovo	netbook	IdeaPad S10-3	F12		F2	
Lenovo	notebook	g460, g470, g475, g480, g485	F12		F2	
NEC			F5		F2	
Packard Bell			F8		F1, Del	
Samsung			F12, Esc			
Samsung	netbook	NC10	Esc		F2	Boot Tab, Select "Boot Device Priority", Press Return, Up/Down to Highlight, F6/F5 to change priority.

USB Flash Drive Boot Reference List

Manufacturer	Type	Models	Boot Menu	Boot Once	BIOS/UEFI Key	Change Priority
Samsung	notebook	np300e5c, np300e5e, np350v5c, np355v5c, np365e5c, np550p5c	Esc		F2	Boot Tab, Select "Boot Device Priority", Press Return, Up/Down to Highlight, F6/F5 to change priority.
Samsung	ultrabook	Series 5 Ultra, Series 7 Chronos, Series 9 Ultrabook	Esc	Note that you must first disable fast boot in BIOS/UEFI to boot from a USB drive.	F2	Boot Tab, Select "Boot Device Priority", Press Return, Up/Down to Highlight, F6/F5 to change priority.
Samsung	ultrabook	Ativ Book 2, 8, 9	F2	Note that you must first disable fast boot in BIOS/UEFI to boot from a USB drive or use the F2 boot menu.	F10	Boot Tab, Select "Boot Device Priority", Press Return, Up/Down to Highlight, F6/F5 to change priority.
Sharp					F2	
Sony		VAIO Duo, Pro, Flip, Tap, Fit	assist button		assist button	
Sony		VAIO, PCG, VGN	F11		F1, F2, F3	
Sony		VGN	Esc, F10		F2	BIOS "BOOT" section, "External Device Boot" enabled
Toshiba	laptop	Kira, Kirabook 13, Ultrabook	F12		F2	
Toshiba	laptop	Qosmio g30, g35, g40, g50	F12		F2	
Toshiba	laptop	Qosmio x70, x75, x500, x505, x870, x875, x880	F12		F2	
Toshiba		Protege, Satellite, Tecra	F12		F1, Esc	
Toshiba		Equium	F12		F12	