

PACK FACE STEP 1:

BIND ALL THE EDGES WITH 1" GROGRAN.




PACK FACE STEP 2:

EDGE STITCH DOUBLED BOTTOM PEICE ON






PACK FACE STEP 3:

PIN AND STITCH DOUBLED BOTTOM ON ALONG THE EDGE OF THE RIBBON

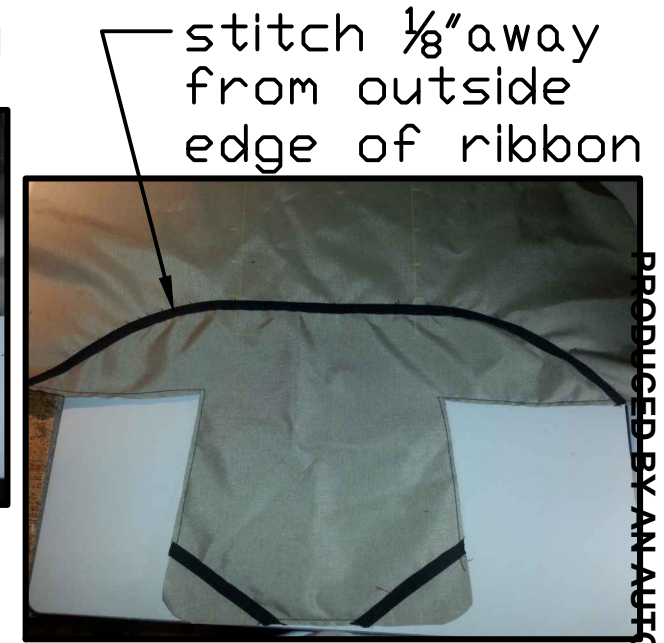

PACK FACE STEP 4: SEW ON WEBBING SKELETON, BARTACK AT THE WEBBING INTERSECTIONS AND POINTS WITH BUCKLES.

1"x26" lt webbing

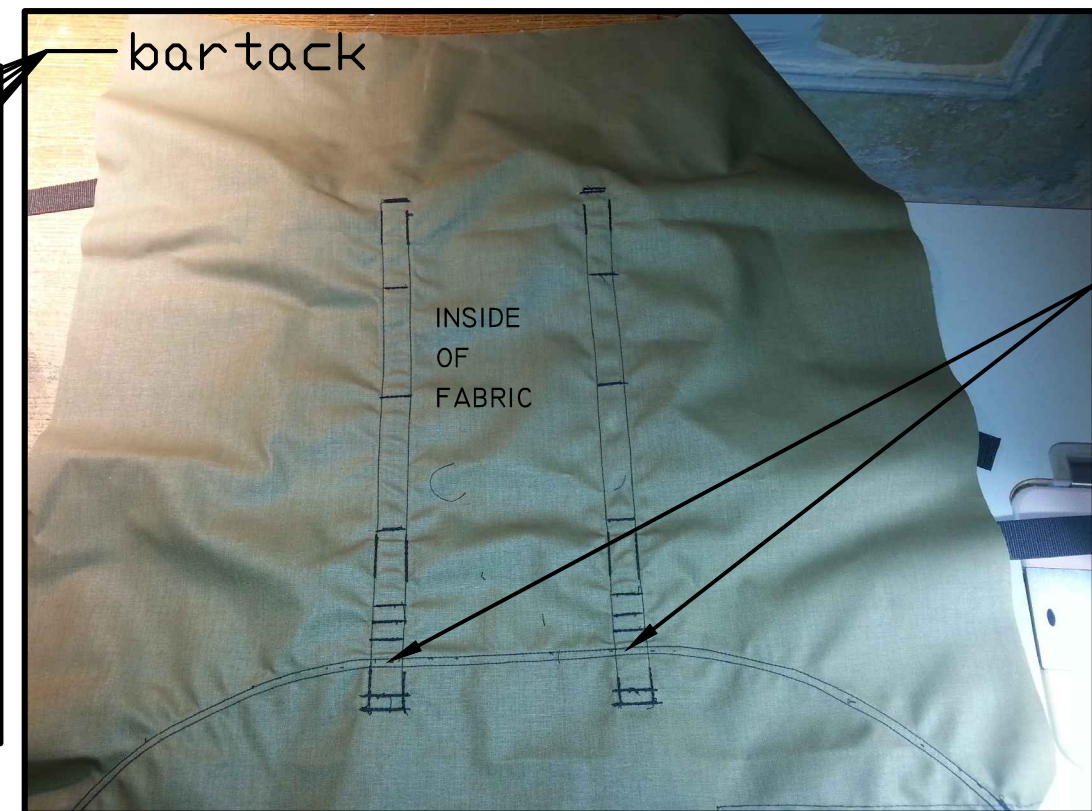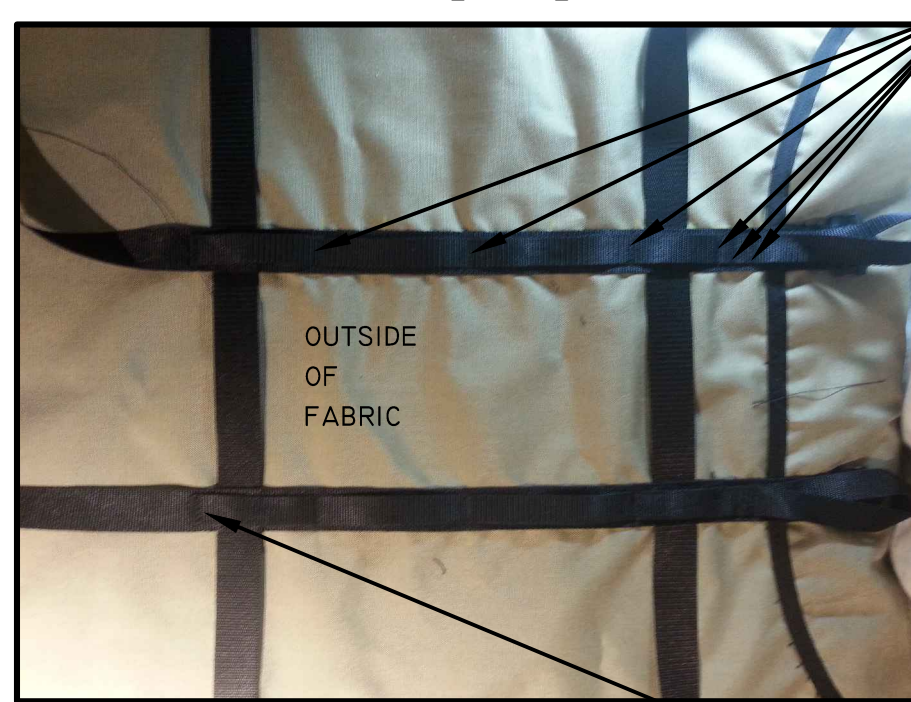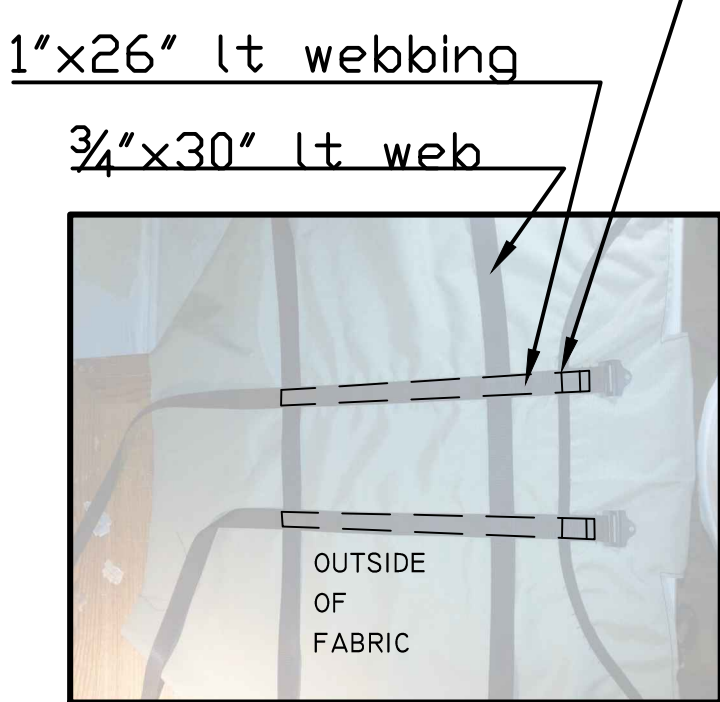

fold over 1/2"x22" webbing on the end and bartack

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT