


PACK FACE STEP 4 CONTINUED:

ADD LOOPS, BARTACK TWICE ON EACH ANCHOR POINT.

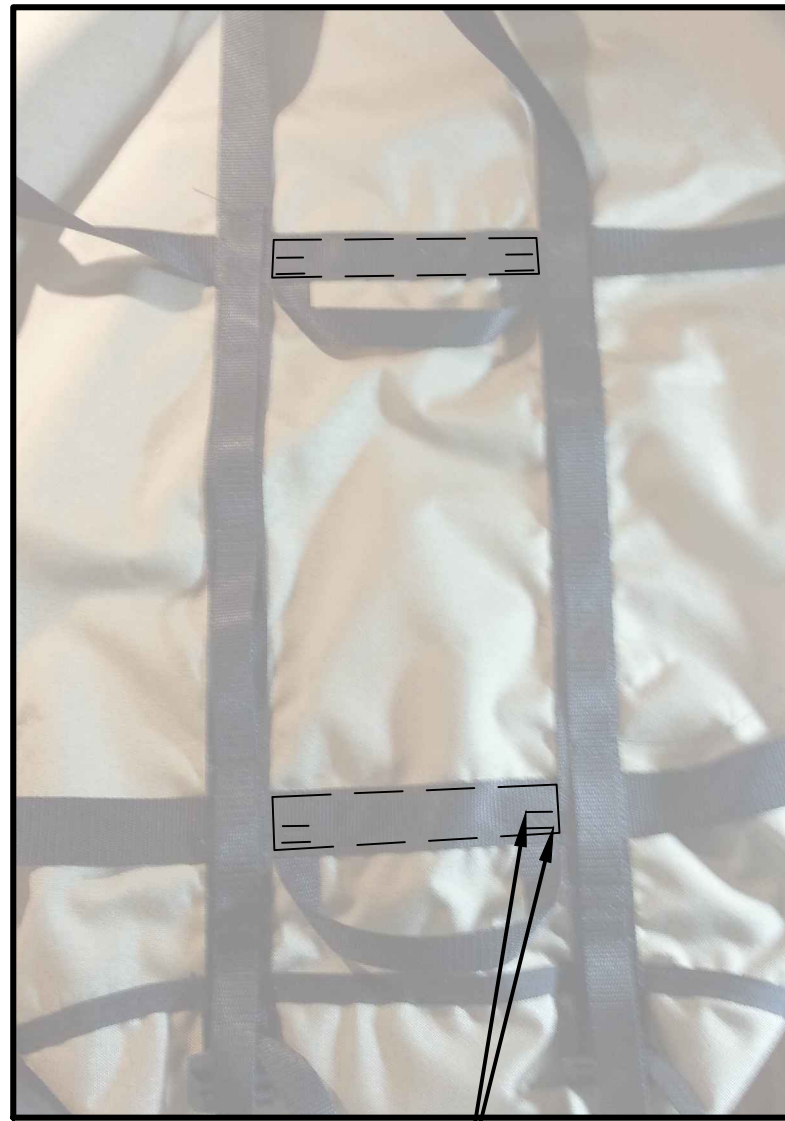


bartack once near the edge and once and 3/16" in from the edge

IF YOU ARE ADDING THE DRAWSTRING COLLAR IT WOULD BE BEST TO DO SO BEFORE CLOSING THE BOTTOM CORNERS UP. SEE PAGE 13 FOR INSTRUCTIONS AND PATTERN

ADD SIDE COMPRESSION BUCKLES

3"x3/4" lt webbing, apex wave loc buckles

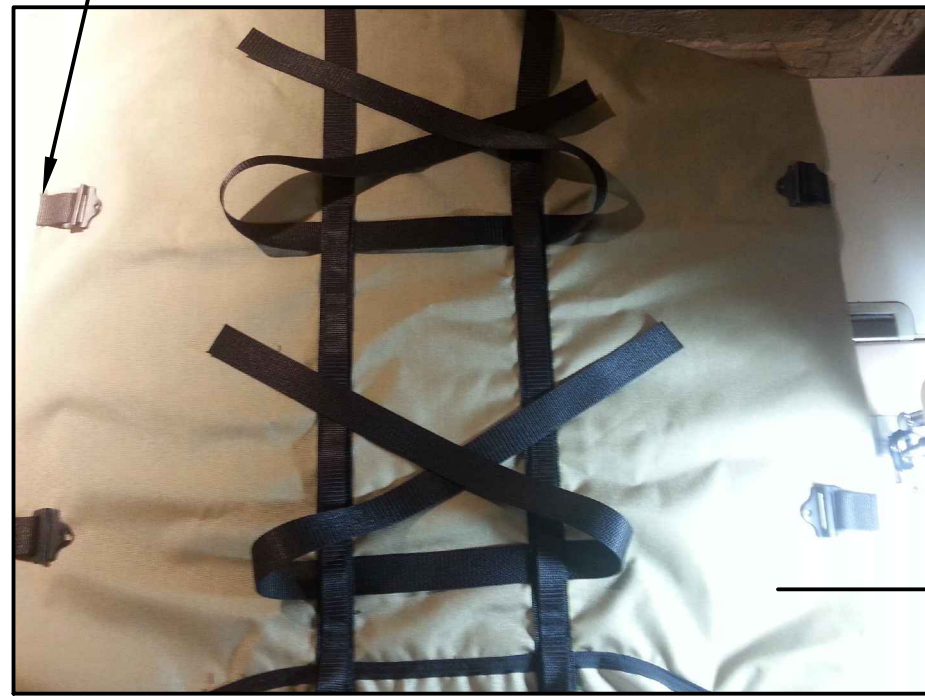

tack bottom compression straps on, (1"x 14" lt webbing) You're done with the face!

PACK FACE STEP 5: CLOSING THE CORNERS UP.



now is your last chance to add things into the bottom seam



MATCH THE TWO POINTS UP AND SEW THE SEAM

stitch back and fourth 3 times at the end to lock up the stitch



after stitching both sides ribbon bind the seam, extend ribbon 1" beyond material and sear end of ribbon



PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT

PRODUCED BY AN AUTODESK EDUCATIONAL PRODUCT