

INSTRUCTIONS - PAGE 4 (IF THERE ARE INCONSISTANCYS IN THE PICTURES, IT IS BECAUSE I MADE ADMENDMENTS TO THE DESIGN AND CORRECTED FOR MISSED STEPS)

PACK BACK STEP 1: SEW VELCRO ONTO INSIDE BACK

PACK BACK STEP 2: MATCH UP VELCRO AND STICK IT TOGEATHER, INSIDE BACK IS DONE!

hook/hard scratchy velcro



ignore frame sleeve, frame is now housed in corrugated frame sheet


loop/soft fuzzy velcro

PACK SHOULDER STRAPS STEP 1: PUTTING ON THE LADDER LOCS

fold webbing till it's sides touch

flatten back out to 2" wide at point of sewing, bar tack 1/4 from cut edge and then again 1/2" from cut edge.

like this

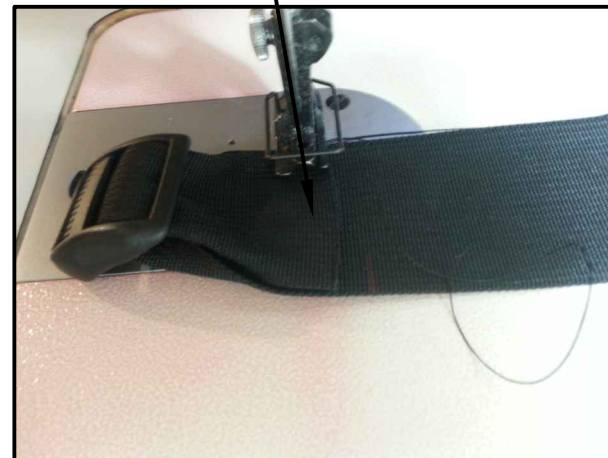

IF YOU WANT OPT PADDED SH STRAPS, GO TO PAGE 12