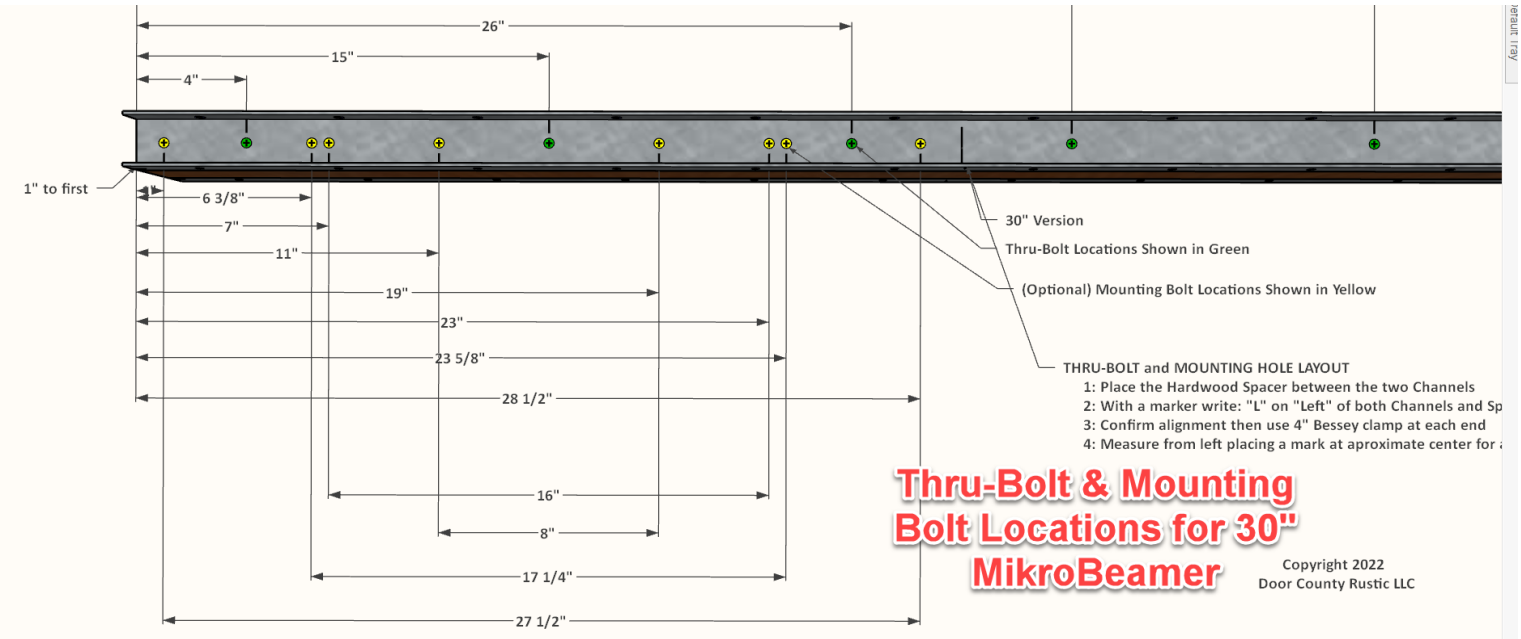
26"
15"
4"
1" to first
6 3/8"
7"
11"
19"
23"
23 5/8"
28 1/2"
16"
8"
17 1/4"
27 1/2"
30" Version
Thru-Bolt Locations Shown in Green
(Optional) Mounting Bolt Locations Shown in Yellow
THRU-BOLT and MOUNTING HOLE LAYOUT
1: Place the Hardwood Spacer between the two Channels
2: With a marker write: "L" on "Left" of both Channels and Sp
3: Confirm alignment then use 4" Bessey clamp at each end
4: Measure from left placing a mark at aproximate center for
Thru-Bolt & Mounting
Bolt Locations for 30"
MikroBeamer
Copyright 2022
Door County Rustic LLC