


## Adafruit's Raspberry Pi Lesson 3. Network Setup

Created by Simon Monk

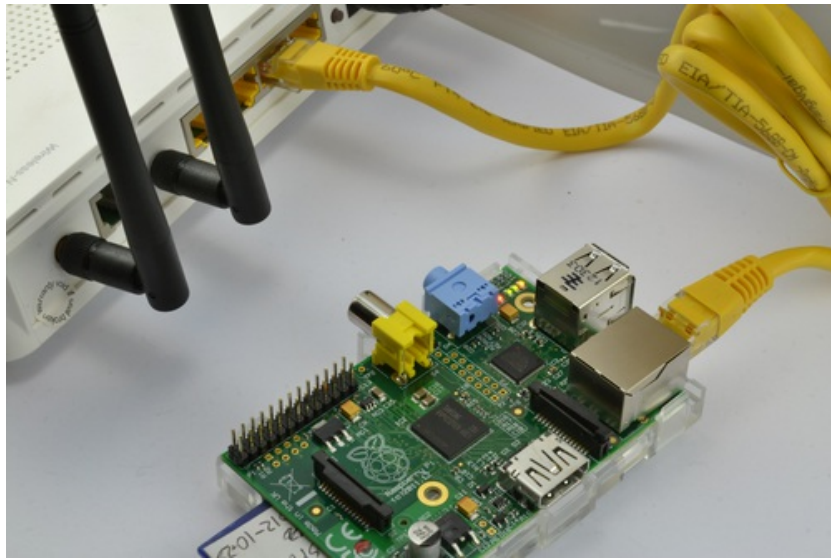

Last updated on 2013-06-11 09:01:05 PM EDT

## Guide Contents

Guide Contents	2
Overview	3
Using a Wired Network	4
Buying a USB WiFi Adapter	6
Setting up Wifi with the Graphic Interface	7
Setting up Wifi with the Command Line	12
Finding Your Pi's IP Address	16
Test and Configure	17


## Overview

---

One of the first things that you will want to do is to get your Raspberry Pi connected up to the Internet.

In this lesson, you will learn how to:

- Connect using an Ethernet cable
- Use a WiFi adapter with both Raspbian and Occidentalis
- Find out the IP address of your Raspberry Pi

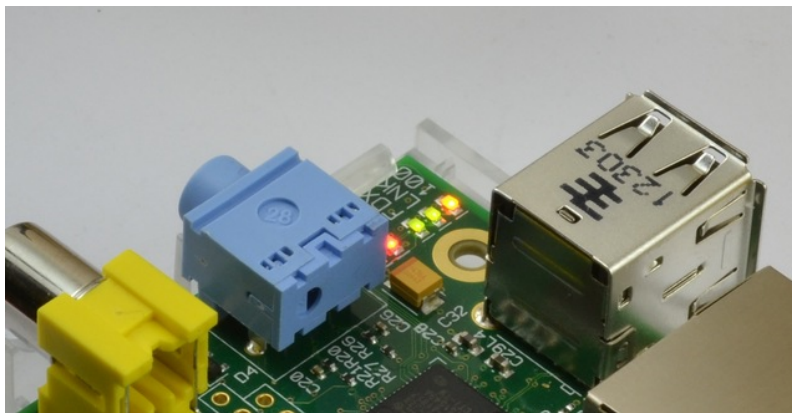


## Using a Wired Network

---

The quickest way to get your Raspberry Pi connected is to use an Ethernet patch cable and just plug it into the back of your home network router.



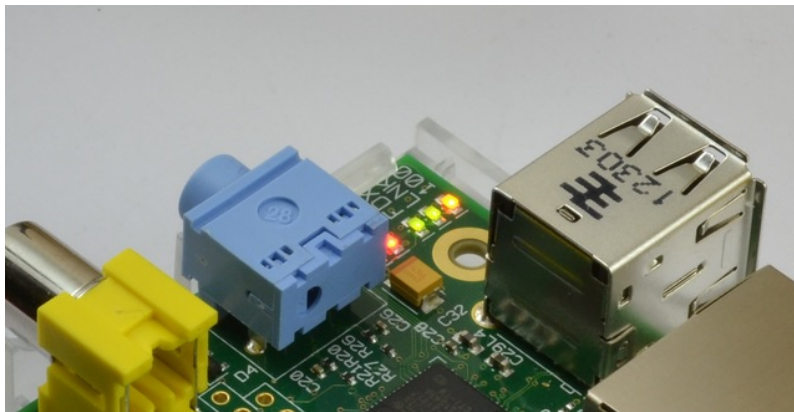


As soon as you plug your Pi in, you should see the network LEDs start to flicker.



For most home networks, you should also be able to connect to the Internet without any further configuration. For this to work, your router should be configured for DHCP (Dynamic Host Configuration Protocol). This service runs on your home network router, dishing out IP addresses to any device that connects to it either through WiFi or by cable.

If DHCP is not turned on, on your home network router, then connect to its management console using a different computer that is already connected.

You should be able to find a setting somewhere that turns it on.

 **HUAWEI** HG533  Help  Logout

Basic > LAN > DHCP

**DHCP** Ethernet

---

**DHCP Server** Help

DHCP server:  Enable

Start IP address: 192.168.1.2 \*

End IP address: 192.168.1.254 \*

Lease duration:  Permanent lease

1 day(s) 0 hour(s) 0 minute(s) 0 second(s)

DNS Domain:

Primary DNS server address: 192.168.1.1

Secondary DNS server address:

---

**DHCP Option Pool** Help

Device type: STB

Option60:

Start IP address: 0.0.0.0 \*

End IP address: 0.0.0.0 \*

DHCP relay:  Enable

## Buying a USB WiFi Adapter

---

Look for a WiFi adapter that supports the RTL8192cu chipset, as both the latest Raspbian and Occidentalis distributions both have support for this built-in and we've found its much faster than the Ralink chipsets

If you already have a WiFi adapter, just give it a go, even a lot of the very low cost budget adapters will work without any trouble.




WiFi does however use quite a lot of power, so check the power rating of your power supply. Some WiFi adapters require an external power supply to work well. [We suggest the 5V 1A power adapter in our shop if this is the case \(http://adafru.it/501\)](http://adafru.it/501). All of the WiFi adapters we have in the Adafruit shop will work just fine this way.


If you have a WiFi adapter plugged in, then you no longer have two free USB sockets available for your keyboard and mouse, [so you may also need a powered USB hub. \(http://adafru.it/961\)](http://adafru.it/961)

## Setting up Wifi with the Graphic Interface

Setting up WiFi requires that your router is broadcasting the SSID. Make sure you have "Broadcast SSID" set up on your router! This will not work with "private" SSID setups

Raspbian releases after 2012-10-28 include a WiFi configuration utility. You will find the shortcut for this on the Desktop. If you are using command-line tools or are logging in over Ethernet, check the next page for how to edit `/etc/network/interfaces` by hand

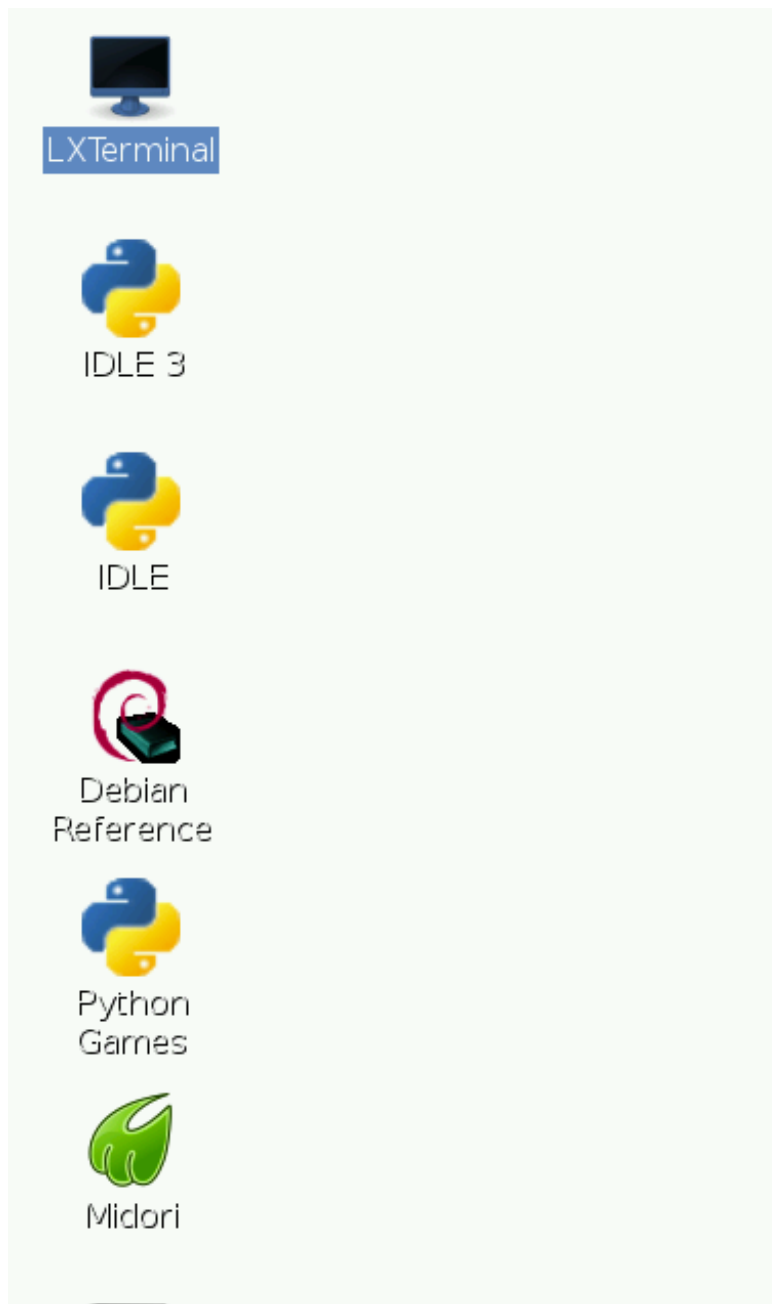


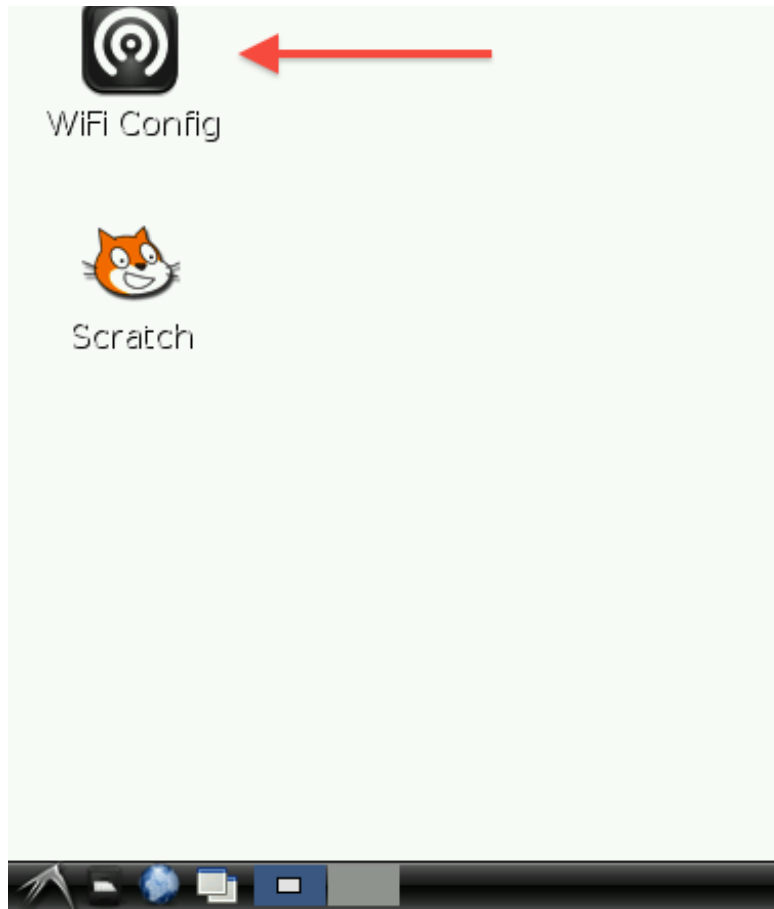

**Step 1.**


Double-click the icon and this is what you will see.



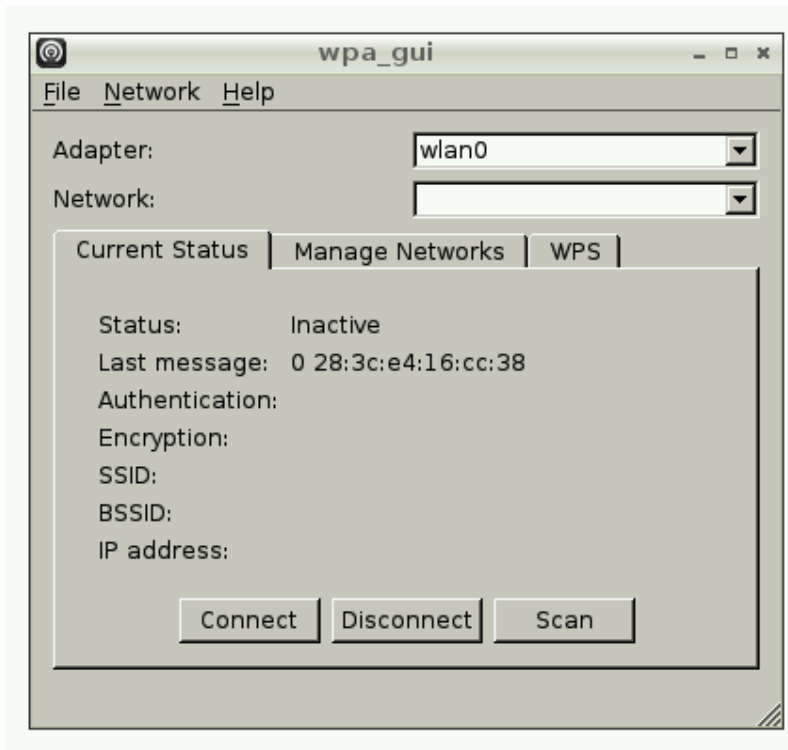

## Step 2.

Click on the Scan button and a second window will open. Find your Wireless access point in the list and double click on it. This will open another window.

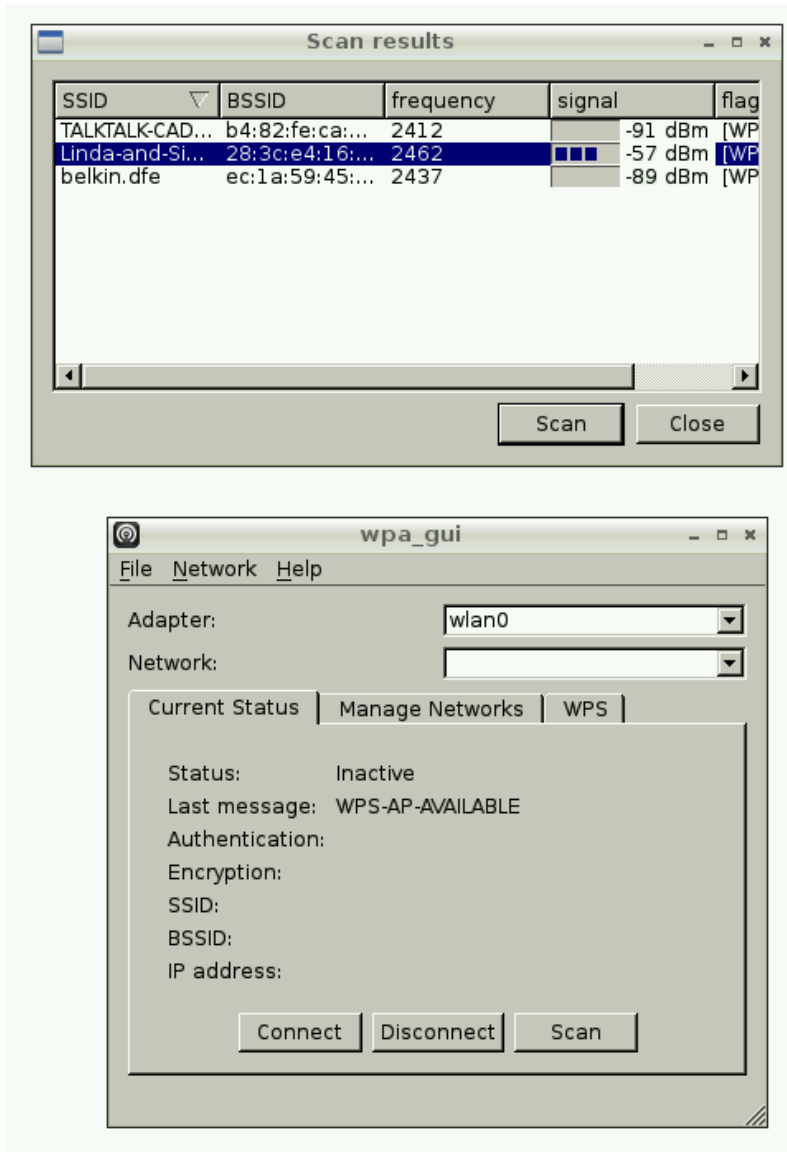

### Step 3.

Enter your password in the PSK field and then click Add. When you look at the first window, you should see that the connection is all set up for use. You can connect or disconnect using the buttons. Notice also the IP address of the Pi is shown at the bottom of the window.



## Setting up Wifi with the Command Line

This tutorial works best if your router is broadcasting the SSID. Make sure you have "Broadcast SSID" set up on your router! This may not work with "private" SSID setups

Setting up WiFi in Occidentalis, is also pretty straight forward. You just need to add the name of your wireless network (its SSID) and your password to a configuration file.


### Step 1.

Boot the Raspberry Pi without the WiFi adapter plugged in.

### Step 2.

Open a Terminal session by clicking on the LXTerminal icon, and enter the following command into it:

```
sudo nano /etc/network/interfaces
```

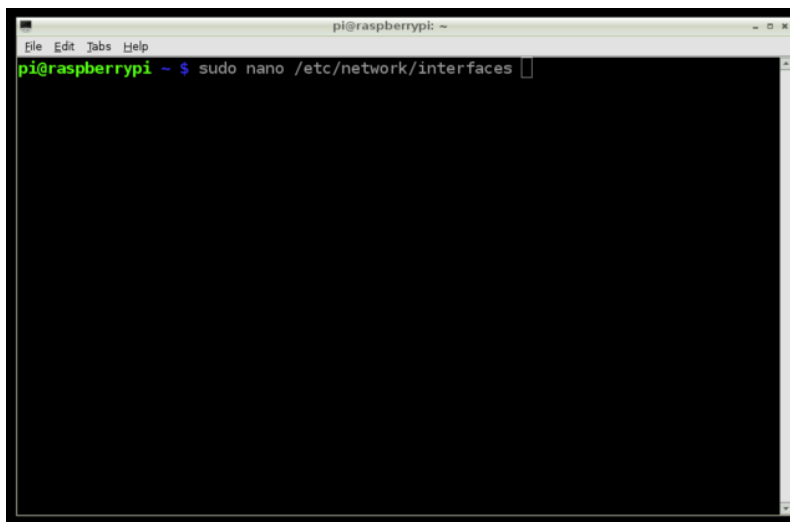

```
auto lo
iface lo inet loopback
iface eth0 inet dhcp
allow-hotplug wlan0
auto wlan0
```

```
iface wlan0 inet dhcp
    wpa-ssid "ssid"
    wpa-psk "password"
```

If you are using a 'hidden' SSID, try the following (hat-tip to <http://www.dafinga.net/2013/01/how-to-setup-raspberry-pi-with-hidden.html> (<http://adafru.it/cfM>))

```
auto lo

iface lo inet loopback
iface eth0 inet dhcp

auto wlan0
allow-hotplug wlan0
iface wlan0 inet dhcp
    wpa-scan-ssid 1
    wpa-ap-scan 1
    wpa-key-mgmt WPA-PSK
    wpa-proto RSN WPA
    wpa-pairwise CCMP TKIP
    wpa-group CCMP TKIP
    wpa-ssid "My Secret SSID"
    wpa-psk "My SSID PSK"

iface default inet dhcp
```

### Step 3.

This opens an editor screen of the wifi configuration file you need to change.



```
pi@raspberrypi: ~
GNU nano 2.2.6 File: /etc/network/interfaces


auto lo

iface lo inet loopback
iface eth0 inet dhcp

auto wlan0
allow-hotplug wlan0
iface wlan0 inet dhcp
    wpa-ssid "my-network-ssid"
    wpa-psk "my-wifi-password"

[ Read 12 lines ]
^G Get Help  ^O WriteOut  ^R Read File  ^Y Prev Page  ^K Cut Text    ^C Cur Pos
^X Exit      ^J Justify   ^W Where Is  ^V Next Page  ^U UnCut Text ^I To Spell
```

The two places where you need to make a change are on the last two lines. Change the file so that it looks like this:

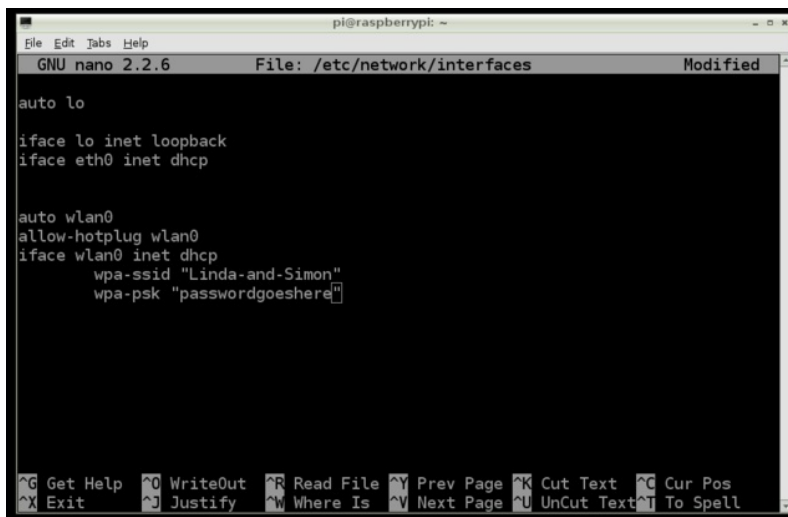

```
pi@raspberrypi: ~
GNU nano 2.2.6 File: /etc/network/interfaces Modified
auto lo
iface lo inet loopback
iface eth0 inet dhcp


auto wlan0
allow-hotplug wlan0
iface wlan0 inet dhcp
    wpa-ssid "Linda-and-Simon"
    wpa-psk "passwordgoeshere"
```

Of course, you should put in **your** network and password! Note that you need to keep the double-quote characters around your wireless network name and password.

This kind of editor does not let you use the mouse. Instead, use the cursor keys to move around the file.

#### Step 4.

When you have finished press [ctrl]x. This will ask if you want to save the modified files.

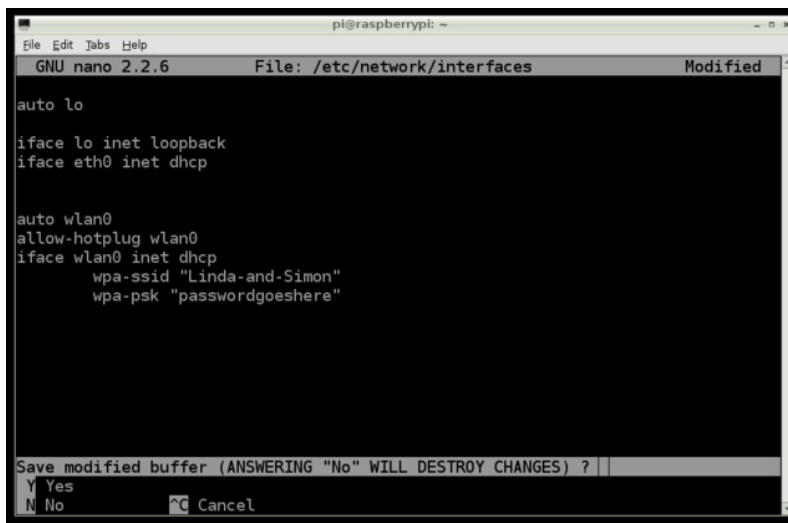

```
pi@raspberrypi: ~
GNU nano 2.2.6 File: /etc/network/interfaces Modified
auto lo
iface lo inet loopback
iface eth0 inet dhcp

auto wlan0
allow-hotplug wlan0
iface wlan0 inet dhcp
    wpa-ssid "Linda-and-Simon"
    wpa-psk "passwordgoeshere"

Save modified buffer (ANSWERING "No" WILL DESTROY CHANGES) ?
Y Yes
N No ^C Cancel
```

Press 'Y' and then Return to save the file with the same name.

#### Step 5.


Shut down your Raspberry Pi, plug the WiFi adapter in and start it up again. You should find that the Raspberry Pi connects using the WiFi adapter as it boots up.

## Finding Your Pi's IP Address

You can find the IP address of your computer, either by opening the WiFi setup tool again. The IP address will appear at the bottom of the Window.

If you are using Occidentals, or you want to do this over a command line terminal. Open up a LXTerminal window and type the following command:

```
sudo ifconfig
```

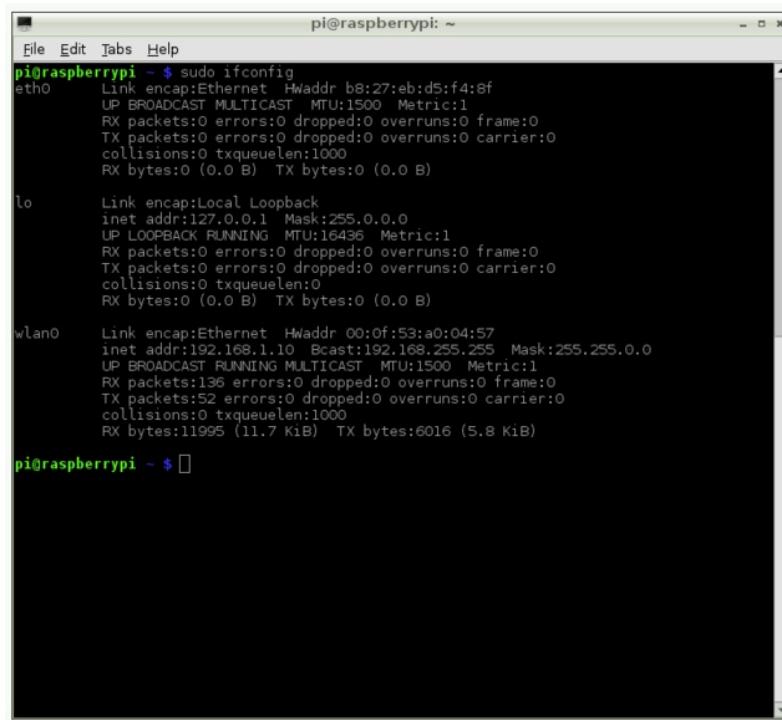

```

pi@raspberrypi ~ $ sudo ifconfig
eth0      Link encap:Ethernet  Hwaddr b8:27:eb:d5:f4:8f
          UP BROADCAST MULTICAST  MTU:1500  Metric:1
          RX packets:0 errors:0 dropped:0 overruns:0 frame:0
          TX packets:0 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:0 (0.0 B)  TX bytes:0 (0.0 B)

lo        Link encap:Local Loopback
          inet addr:127.0.0.1  Mask:255.0.0.0
          UP LOOPBACK RUNNING  MTU:16436  Metric:1
          RX packets:0 errors:0 dropped:0 overruns:0 frame:0
          TX packets:0 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:0
          RX bytes:0 (0.0 B)  TX bytes:0 (0.0 B)

wlan0     Link encap:Ethernet  Hwaddr 00:0f:53:a0:04:57
          inet addr:192.168.1.10  Bcast:192.168.255.255  Mask:255.255.0.0
          UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
          RX packets:136 errors:0 dropped:0 overruns:0 frame:0
          TX packets:52 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:11995 (11.7 KiB)  TX bytes:6016 (5.8 KiB)

pi@raspberrypi ~ $

```

Next to the **wlan0** entry you will see inet addr: **192.168.1.10** which is the IP address of the Raspberry Pi.

Remember! If your IP address starts with **192.168** or **10.0** then its an internal address - that means you can get OUT to the Internet but you cannot have someone outside your home or network reach your Pi via the IP address. This is important if you want to have a webserver running on a Pi that outside people can reach. In general, its much safer to keep your Pi on an internal network so it can't be hacked as easily!



## Test and Configure

---

If you have X running, open the Midori web browser and navigate to the URL of your favourite electronics supplier.



If you are using a command line, the **ping** command can be used to see if you are reaching the internet. Try **ping google.com** or **ping adafruit.com** to check if you can reach those sites!